# Ultrathin Dimming Touch Wheel RF Remote Controller

# Model No.: R6, R6-1

1 and 4 zone dimming/Touch brightness wheel/Wireless remote 30m distance/CR2032 battery

#### **Features**

- Apply to single color LED controller.
- Ultra sensitive color adjustment touch wheel.
- Each remote can match one or more receiver.
- CR2032 battery powered.
- Operate with LED indicator light.
- White & Black available.







1 Zone Dimming

C€ RoHS emc LVD RED


## **Technical Parameters**

 
Input and Output		
Output signal	RF(2.4GHz)	
Working voltage	3VDC(CR2032)	
Working current	<5mA	
Standby current	<10µA	
Standby time	l year	
Remote distance	30m(Barrier-free space)	

Safety and EMC	
EMC standard (EMC)	ETSI EN 301 489-1 V2.2.3
	ETSI EN 301 489-17 V3.2.4
Safety standard(LVD)	EN 62368-1:2020+A11:2020
Radio Equipment(RED)	ETSI EN 300 328 V2.2.2
Certification	CE,EMC,LVD,RED

Environment		
Operation temperature	Ta: -30 °C ~ +55 °C	
Package		
Size	L114 x W65 x H20mm	
Gross weight	0.062kg	
Warranty		
Warranty	5 years	

 
### Mechanical Structures and Installations

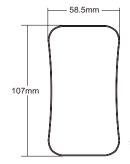










 Note: 1. Before the first use, please remove the protective film on the battery. 2. If the LED indicator is not on when press key, it is due to dead battery



# Operation

- When light is on, touch the color wheel, the indicator will display red.
- To extend battery life, no touch or press key operation after a few seconds, the touch wheel will enter sleep state, you need press any key to make touch wheel quit sleep state.

or raise the battery shrapnel with a screwdriver.

## Match Remote Control (two match ways)

End user can choose the suitable match/delete ways. Two options are offered for selection:

#### Use the controller's Match key

Match:

Short press match key, immediately press on/off key (single zone remote) or zone key (multiple zone remote) of the remote.

The LED indicator fast flash a few times means match is successful.

Delete:

Press and hold match key for 5s to delete all match,

The LED indicator fast flash a few times means all matched remotes were deleted.

Match:

or bad contact caused by multiple plugging, please replace the battery,

Switch off the power, then switch on power, repeat again.

Immediately short press on/off key (single zone remote) or zone key (multiple zone remote) 3 times on the remote.

The light blinks 3 times means match is successful.

Delete:

Switch off the power, then switch on power, repeat again.


Immediately short press on/off key (single zone remote) or zone key (multiple zone remote) 5 times on the remote.

The light blinks 5 times means all matched remotes were deleted.

User Manual Ver 1.1.3 -

## Key function

#### • R6 4 zone dimming remote

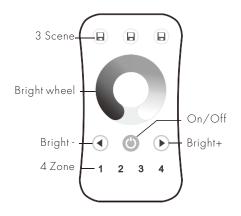

On/Off: Short press turn on/off all zone light.

1,2,3,4 zone: Short press select and turn on zone light, long press 2s turn off zone light.

Short press multiple zone key fastly, will synchronous select multiple zone synchronously.

Bright wheel: Touch to change current zone brightness.

Bright+/-: Adjust brightness for current selected zone,

short press 10 levels, long press 1-6s for continuous 256 levels adjustment.

**3 Scene:** Short press recall the scene, long press 2s save the current state into the scene.

the LED indicator will light up longer when save OK.

4 zone recall or save synchronously.

The remote can be used as 4 zone dimming remote or single zone 4 channel dimming remote.

On/Off + 4: Long press 2s set as 4 channel dimming remote,


only match with one or multiple receiver of 4 channel, such as V4 or C4 controller.

On/Off + 1: Long press 2s set as 4 zone dimming remote,

each zone match with one or multiple receivers.

When set ok, the red indicator will light on longer.

## • R6-1 1 zone dimming remote

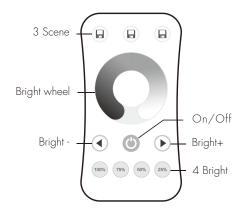

On/Off: Turn on/off light.

Bright wheel: Touch to change brightness.

**Bright+/-:** Adjust brightness, short press 10 levels, long press 1-6s for continuous 256 levels adjustment.

100%,75%,50%,25%: Get 4 kinds brightness directly.

3 Scene: Brightness memory.

Short press recall the scene, long press 2s save the current brightness into the scene.

the LED indicator will light up longer when save OK.

# Safety information

- 1. Read all instructions carefully before you begin this installation.
- 2. When installing battery, pay attention to the battery positive and negative polarity.

A long time without the remote control, remove the battery.

When remote distance becomes smaller and insensitive, replace the battery.

- 3. If no response from the receiver, please re-match the remote.
- 4. Gently handle remote, beware of falling.
- 5. For indoor and dry location use only.

User Manual Ver 1.1.3 —