Wall Mounted Touch Panel

Model No.: T20. T20-1. T20-2. T20-3

1-4 Zone dimming switch/Glass touch panel/Wireless remote 30m distance/AAA x 2 battery



Features

CE RoHS EMC IVD RED

0

0 0

T20

- Touch panel 1/2/3/4 zone dimming switch RF remote.
- Each zone can remote control multiple Skydance's 2.4G LED controllers.
- Ultra sensitive high strength glass touch panel.
- Touch keys with chord tones and LED indicator.
- Free installation, no wiring, removable.
- AAA x 2 battery powered.
- White & Black glass panel available.

Technical Parameters

| Input and Output | |
|------------------|--------------------------|
| Output signal | RF(2.4GHz) |
| Working voltage | 3VDC(AAA x 2) |
| Working current | < 5mA(Without tune) |
| | < 20mA(with tune) |
| Standby current | < 20µA |
| Standby time | 1 year |
| Remote distance | 30m (Barrier-free space) |
| | |

 
| Environment | |
|-------------------------|-------------------|
| Operation temperature | Ta: -30°C ~ +55°C |
| Case temperature (Max.) | Tc:+65°C |
| IP rating | IP20 |

| Safety and EMC | |
|----------------------|---|
| EMC standard (EMC) | ETSI EN 301 489-1 V2.2.3 ETSI EN 301 489-17 V3.2.4 |
| Safety standard(LVD) | EN 62368-1:2020+A11:2020 |
| Radio Equipment(RED) | ETSI EN 300 328 V2.2.2 |
| Certification | CE,EMC,LVD,RED |

| Warranty | |
|----------|---------|
| Warranty | 5 years |


| Weight | |
|--------------|------|
| Net weight | 160g |
| Gross weight | 190g |

Mechanical Structures and Installations



Installation diagram:

 Typical base as below:




To fix the panel, two options are offered for selection:

Option 1: fix it on the wall with two screws.

Option 2: adhere it to the wall with paster.

 Key function



I - ON key

Short press: Turn on the light of each zone. Long press(1-6s): Dimming up when light is on.

0 - OFF key

Short press: Turn off the light of each zone. Long press(1-6s): Dimming down when light is on. Long press(5s): Turn on or turn off tone when light is off.

User Manual Ver 1.0.7 Page 1 End user can choose the suitable match/delete ways. Two options are offered for selection:

Use the controller's Match key

Match:

Short press match key, immediately press ON key of the touch panel.

The LED indicator fast flash a few times means match is successful

Delete:

Press and hold match key for 5s to delete all match.
The LED indicator fast flash a few times
means all matched remotes were deleted.

Use Power Restart

Match:

Switch off the power of the receiver, then switch on power, repeat again.

Immediately short press ON key 3 times on the touch panel. The light blinks 3 times means match is successful.

Delete:

Switch off the power of the receiver, then switch on power, repeat again.

Immediately short press ON key 5 times on the touch panel.

The light blinks 5 times means all matched remotes were deleted.

Safety information

- 1. Read all instructions carefully before you begin this installation.
- $2. \ \ When installing \ battery, pay \ attention \ to \ the \ battery \ positive \ and \ negative \ polarity.$

A long time without the remote control, remove the battery.

When remote distance becomes smaller and insensitive, replace the battery.

- 3. If no response from the receiver, please re-match the remote.
- 4. Gently handle remote, beware of falling.
- 5. For indoor and dry location use only.

User Manual Ver 1.0.7