


5-Button Curtain Remote Control

Features

- Use with curtain switch module.
- Can be set as single zone 2 scene remote control or 2 zone remote control.
- CR2032 battery powered.
- Operate with LED indicator light.
- Magnet on the back which can be stuck on back holder or other metal surfaces.
- White/black available.

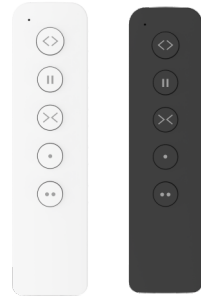



RF

CE RoHS

Technical Parameters

Input and Output		Environment		Safety and EMC	
Output signal	RF(2.4Ghz)	Operation temperature	Ta: -30 °C ~ +55 °C	Safety standard	EN 61347-1/-2 EN 62493
Working voltage	3VDC(CR2032)	Package		EMC standard	EN IEC 55015 EN IEC 61547 ETSI EN 301 489-1/-3
Working current	<5mA	Size	L156 x W48 x H22mm		
Standby current	<2μA	Gross weight	0.077kg	Radio Equipment	ETSI EN 300 440
Standby time	1 year	Warranty		Certification	CE RoHs
Remote distance	30m(Barrier-free space)	Warranty	5 years		

Mechanical Structures and Installations

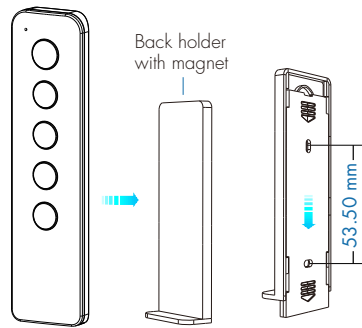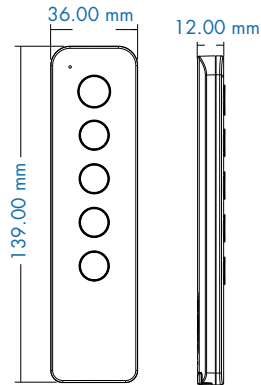

To fix the remote, three options are offered for selection:

- Option 1: Can be adsorbed directly onto metal surfaces.
- Option 2: Fix the remote' back holder on the wall with two screws.
- Option 3: Adhere the remote' back holder to the wall with paster.

Note:

1. Before the first use, please remove the protective film on the battery.
2. If the LED indicator is not on when press key, it is due to dead battery or bad contact caused by multiple plugging, please replace the battery, or raise the battery shrapnel with a screw driver

Key Function



RVC remote can be set as single zone remote (default) or 2-zone remote.

Long press <> key and . key for 2s, set as single zone remote, the red indicator blinks 1 time.

Long press <> key and .. key for 2s, set as 2-zone remote, the red indicator blinks 2 times.

<> : Open the curtains slowly.

|| : the curtain stops.

<< : Close curtains slowly.

. : For single zone remote, short press to call up the scene, curtains restore memory position.

.. long press for 5s to save the current position to scene 1/scene 2 respectively, the LED indicator shows green when save successfully.

For 2-zone remote, select zone 1 curtains or zone 2 curtains to operate.

Match Remote Control (two match ways)

End user can choose the suitable match/delete ways. Two options are offered for selection:

Use the remote's Match key

Match:

Short press match key, immediately press <> key (single zone remote).

The LED indicator fast flash a few times means match is successful.

Delete:

Press and hold match key for 5s to delete all match, The LED indicator fast flash a few times means all matched remotes were deleted.

Use Power Restart

Match:

Switch off the power of the controller, then switch on power, repeat again.

Immediately short press <> key (single zone remote) 3 times. The light blinks 3 times means match is successful.

Delete:

Switch off the power of the controller, then switch on power, repeat again.

Immediately short press <> key (single zone remote) 5 times. The light blinks 5 times means all matched remotes were deleted.

Note:

When set to a 2-zone remote, you need to short press the zone key first, then press the <> key for matching or deleting operation.

Safety Information

1. Read all instructions carefully before you begin this installation.
2. A long time without the remote control, remove the battery.
When remote distance becomes smaller and insensitive, replace the battery.
3. If no response from the receiver, please re-match the remote.
4. Gently handle remote, beware of falling.
5. For indoor and dry location use only.
6. Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children.
Do NOT dispose of batteries in household trash or incinerate.
7. Even used batteries may cause severe injury or death.
8. Call a local poison control center for treatment information.
9. Compatible battery type is CR2032 and the nominal battery voltage is 3V.
10. Non-rechargeable batteries are not to be recharged.
11. Do not force discharge, recharge, disassemble, heat above 55 °C or incinerate.
Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
12. Ensure the batteries are installed correctly according to polarity (+ and -).
13. Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
14. Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
15. Always completely secure the battery compartment.
If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.