

V5-SP(WT)

WiFi & RF 5 CH Constant Voltage LED Controller

- 5-in-1 function, for single color or color temperature, RGB, RGBW, RGB+CCT LED strips.
- Tuya Smart APP cloud control, support on/off, RGB color, color temperature and brightness adjust, delay turn on/off light, timer run, scene edit and music play function.
- Voice control, support for Amazon Alexa, Google Assistant, Tmall Genie and Xiaodu smart speakers.
- Match with RF 2.4G remote controller optional.
- User need set light type before Tuya smart APP network connection and match RF remote of the same light type.
- Each V5-SP(WT) controller can also work as WiFi-RF converter, then use Tuya smart APP to control one or more RF LED controller or RF LED dimming driver synchronously.
- Connect with external push switch to achieve on/off, and brightness, color temperature, RGB color adjustment function.
- Built-in 10 dynamic modes when controlling RGB/RGBW/RGB+CCT light, including jump and fade.
- Light on/off fade time 3s selectable.
- Reverse/Over-heat protection.




CE RoHS

Technical Parameters

Input and Output		Dimming data		Safety and EMC	
Input voltage	12-24VDC	Input signal	WiFi+RF 2.4GHz+Push-DIM	EMC standard	EN IEC 55015/ EN IEC 61547-1/-2 ETSI EN 301 489-1/-17
Input current	10.5A	Control distance	30m (Barrier-free space)	Safety standard	EN 61347-1/-2
Output voltage	5x(12-24)VDC	Dimming gray scale	4096 (2^12) levels	Radio equipment	ETSI EN 300 328 ETSI EN 300 440
Output current	5CH, 2A/CH	Dimming range	0-100%	Certification	CE RoHS
Output power	5X(24-48)W	Dimming curve	Logarithmic	Package	
Environment		PWM frequency	2KHz(default)	Size	L60 x W60 x H40mm
Operation temperature	Ta: -20°C ~ +55°C	Warranty and Protection		Gross weight	0.043kg
Case temperature (Max.)	Tc: +77°C	Warranty	5 years		
IP rating	IP20	Protection	Reverse polarity, Over heat		


Mechanical Structures and Installations

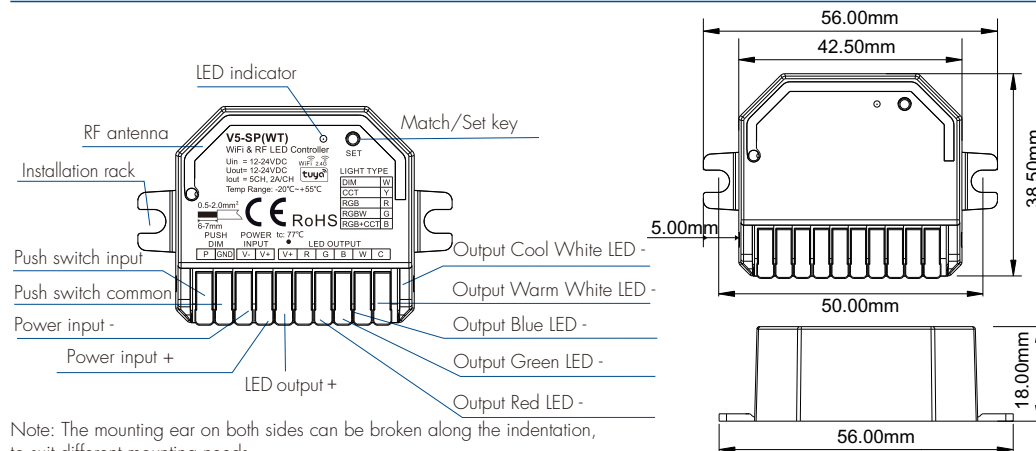

Note: The mounting ear on both sides can be broken along the indentation, to suit different mounting needs.

User Manual Ver 1.0.0
2025.7

System Wiring

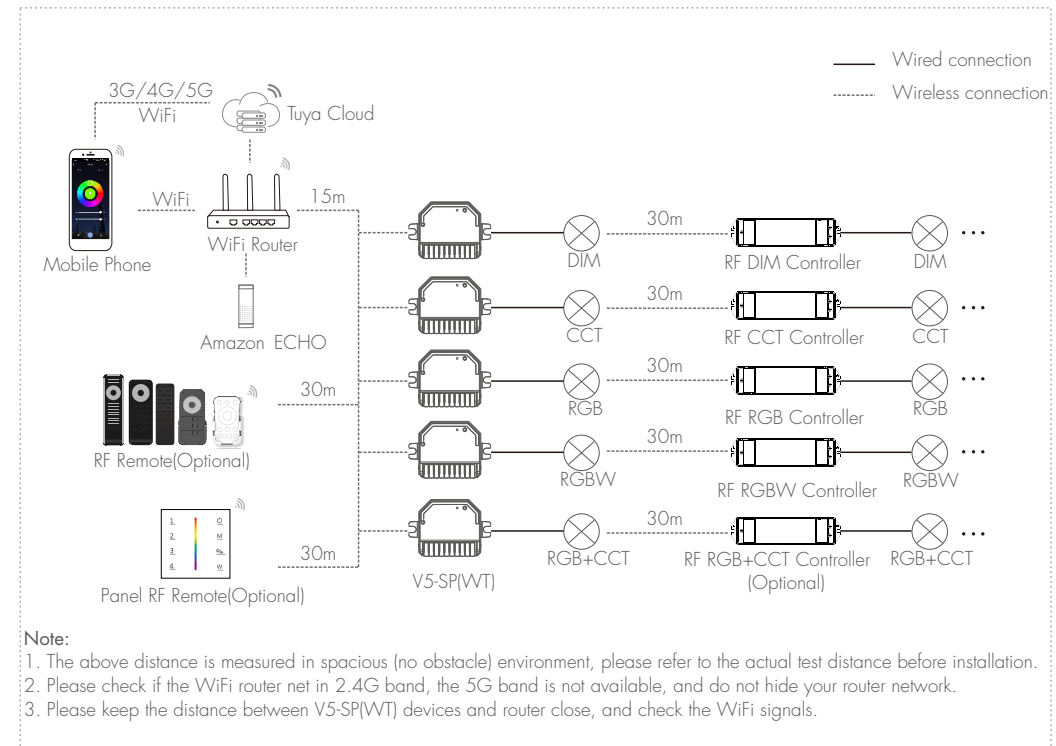


Note:


1. The above distance is measured in spacious (no obstacle) environment, please refer to the actual test distance before installation.
2. Please check if the WiFi router net in 2.4G band, the 5G band is not available, and do not hide your router network.
3. Please keep the distance between V5-SP(WT) devices and router close, and check the WiFi signals.

Wiring Diagram


- For RGB+CCT light (the LED indicator is blue)

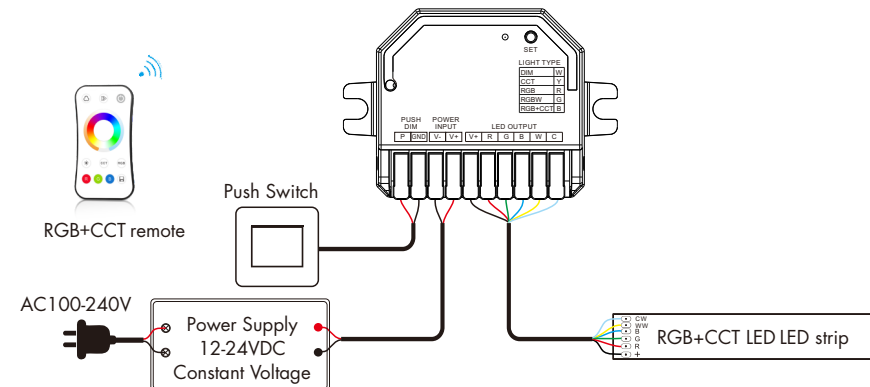


- For RGBW light (the LED indicator is green)

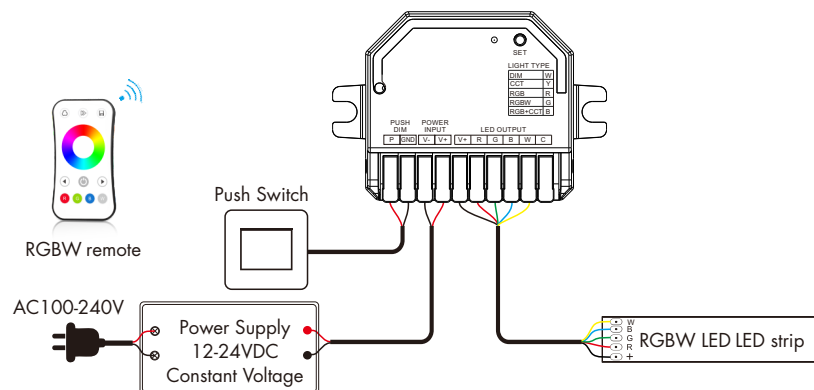


- For RGB light (the LED indicator is red)

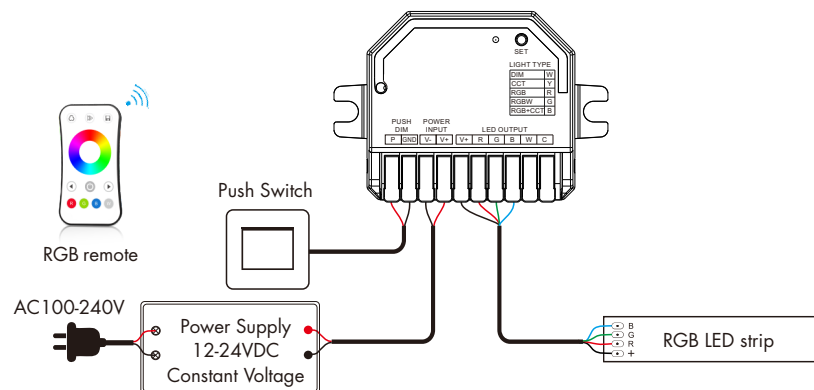

- For CCT light (the LED indicator is yellow)

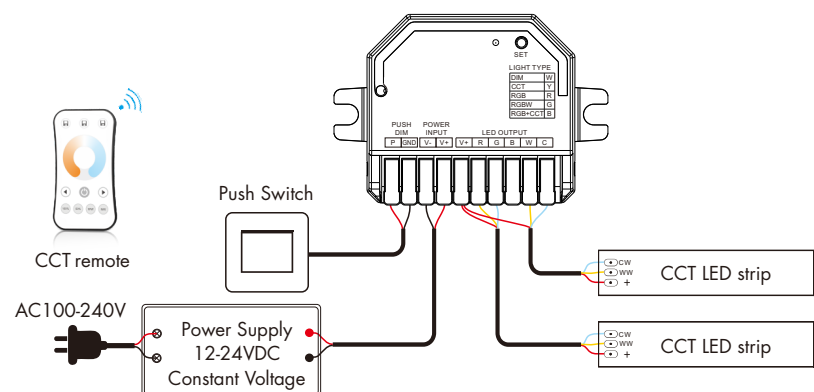


- For DIM light (the LED indicator is white)

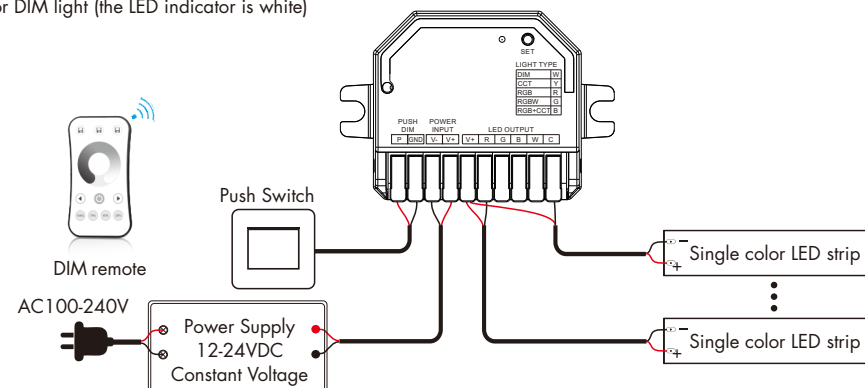

Wire preparation:

 1. The wiring can be solid or stranded with a cross-sectional area of 0.5 to 2.0 mm². Conventional 1 mm² can withstand 10A output current.
2. When wiring is installed, the terminals must be tightened. If they are not tightened, the contact point resistance will be too high and the terminals will easily burn due to heat when used at full load for a long time.



Note: The output power of a constant voltage power supply should be at least 1.2 times that of the output load (light strip), otherwise the full power output of the load can easily cause automatic flickering or shaking of the light.

Light Type Setting

User need to set the correct light type via the SET key before APP pairing and matching the RF remote control. Long press the SET key to switch 5 light types sequentially, every long press 2s to switch one, the LED indicator turns to the corresponding color.

Light type	DIM	CCT	RGB	RGBW	RGB+CCT
LED indicator color	white	yellow	red	green	blue

Note:

For RGB+W light type, RGB channel and W channel can not be turned on at the same time;
For RGB+CCT light type, RGB channel and CCT channel can not be turned on at the same time.

Tuya Smart APP Network Connection


• Download and open APP

Search for "Tuya Smart/Smart Life APP" in the APP store, or scan the QR code on the right to download the APP. Register and login after installation.


• APP Pairing Network

Push twice SET key fastly, or press and hold SET key for 5s, or repeat power off and on for 5 consecutive times fastly, enter WiFi config mode, the LED indicator flash fastly, the output LED strip blinks 10 times. Press and hold SET key for 2s, to switch 5 light types in sequence (Note: This operation will not clear the previous network). If Tuya smart APP network connection succeed, the LED indicator will stop flash and change to the corresponding light type color, you can find RGB+CCT device (or other DIM, CCT, RGB, RGBW device) in Tuya smart APP.

When controlling the light with Tuya Smart/Smart Life APP, if the network connection is poor, you can control the light with Bluetooth connection within the Bluetooth control range. But the light can not be directly controlled by Bluetooth without WiFi configuration.

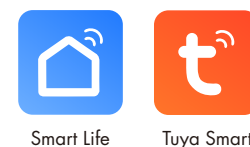

● APP operation

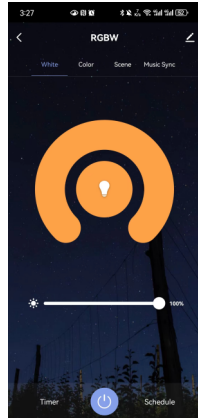


White interface

For DIM type:
Touch brightness slide,
to adjust the brightness.

For RGB type:
Touch brightness slide,
get RGB mixed white firstly,
then to adjust white brightness.


For RGBW type:
Touch brightness slide,
adjust white channel brightness.

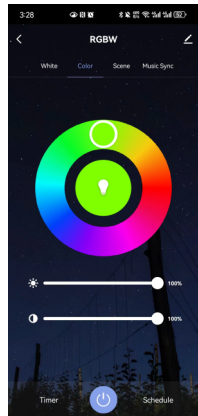

Color interface

For RGB, RGB+WV, RGB+CCT type:
Touch color wheel to adjust static
RGB color.
Touch brightness slide to adjust
color brightness.
Touch saturation slide to adjust
color saturation,
namely gradient from the current
color to white (RGB mixed).

Note: For RGB+WV, RGB+CCT type,
when touching the color wheel
to adjust the static RGB color,
the WV channel or color temperature
will be turned off automatically.

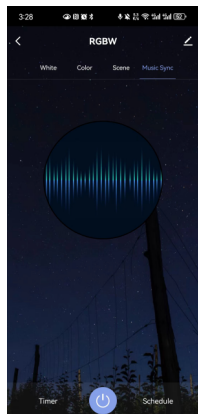


Music, Timer, Schedule

The music play can use smart phone music player or micro-phone as music signal input.

The Timer key can turn on or turn off light in the next 24 hours.


The Schedule key can add multiple timers to turn on or turn off light according to different time periods.

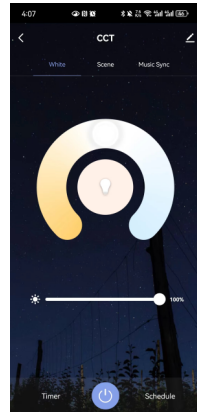

Color temperature interface

For CCT type:
Touch color wheel to
adjust color temperature.
Touch brightness slide to
adjust brightness.

For RGB+CCT type:
Touch color temperature wheel
to adjust color temperature,
and RGB channels will be
automatically turned off.
Touch brightness slide to adjust
color temperature brightness.

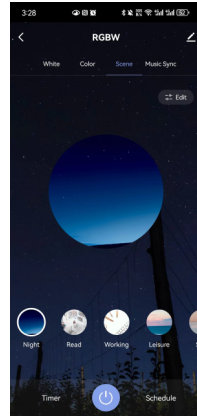

Scene interface

The 1-8 scene can be edited.
3 ways of color change can
be set: Static, Jump, Breathing.
The color change speed can
be set for the jump change
and breathing change.

Push Switch Dimming

The push switch interface can be connected to push panel switch or push button for dimming.
It is recommended that the number of controllers connected to the same push switch does not exceed 25,
and the length of the connecting wire does not exceed 20m.

1. DIM light:

- **Short press:** Turn the light on or off.
- **Long press (1-6s):** Continuously increase or decrease the brightness, long press again after each release,
the brightness changes in the opposite direction, dimming range 1%-100%.
- **Double-click:** Switch between 10% and 100% brightness.

2. CCT light:

- **Short press:** Turn the light on or off.
- **Long press (1-6s):** Adjust the brightness by default, long press again after each release,
the brightness changes in the opposite direction, dimming range 1%-100%.
- **Double-click:** Switch three color temperatures in sequence (warm white - neutral white - cool white).
At the same time, it enters the state of adjusting color temperature by long press,
and automatically exits the state of adjusting color temperature after 5s of no operation.

3. RGB light:

- **Short press:** Turn the light on or off.
- **Long press (1-6s):** Adjust the brightness by default, long press again after each release,
the brightness changes in the opposite direction, dimming range 1%-100%.
- **Double-click:** Switch between color light (RGB) and mixed white light (50% saturation).
At the same time, it enters the state of adjusting color or saturation by long press,
and automatically exits the state of adjusting color or saturation after 5s of no operation.

4. RGBW light:

- **Short press:** Turn the light on or off.
- **Long press (1-6s):** Adjust the brightness by default, long press again after each release,
the brightness changes in the opposite direction, dimming range 1%-100%.
- **Double-click:** Switch between color light (RGB) and white light.
At the same time, it enters the state of adjusting color or white light brightness by long press,
and automatically exits the state of adjusting color or white light brightness after 5s of no operation.

5. RGB+CCT light:

- **Short press:** Turn the light on or off.
- **Short press(1-6s):** Adjust the brightness by default, long press again after each release,
the brightness changes in the opposite direction, dimming range 1%-100%.
- **Double-click:** Switch between color light (RGB) and color temperature.
At the same time, it enters the state of adjusting color or color temperature by long press,
and automatically exits the state of adjusting color or color temperature after 5s of no operation.

On/Off Fade Time Setting

Press and hold the SET key for 1.5s to restore the default parameters,
factory default parameters: RGB+CCT light type, 100% brightness, light on/off fade time is 0.5s.
Press and hold the SET key for 20s, the light on/off fade time is set to 3s.

Match with RF Remote Control (Two ways of matching)

There are two ways to match/delete:

Use match key

Match:
Short press match/set key,
immediately press on/off key (single zone remote)
or zone key (multiple zone remote) of the remote,
The LED indicator fast flash means match is successful.

Delete:
Press and hold match/set key for 10s to delete all match,
The LED indicator fast flash means all matched remotes were
deleted.

Use Power Restart

Match:
Switch off the power, then switch on power, repeat again.
Immediately short press on/off key (single zone remote)
or zone key (multiple zone remote) 3 times on the remote.
The output light flashes 3 times means match is successful.

Delete:
Switch off the power, then switch on power, repeat again.
Immediately short press on/off key (single zone remote)
or zone key (multiple zone remote) 5 times on the remote.
The output light flashes 5 times means all matched remotes were
deleted.

Work as WiFi-RF Converter

V5-SP(VT) can work as WiFi-RF converter, matched with RF LED controller or RF dimmable LED driver,
There are two ways to match/delete:

Use Controller's/driver's Match key

Match:
Short press controller's or driver's match key,
immediately press the on/off button on the Tuya Smart APP.
The LED indicator fast flash means match is successful.

Delete:
Long press controller's or driver's match key
for 5s to delete all match.
The LED indicator fast flash means all matched remotes
were deleted.

Use Power Restart(optional)

Match:
Switch off the power of the controller, then switch on power,
repeat again.
Immediately press the on/off button on the Tuya Smart APP 3 times.
The light flashes 3 times means match is successful.

Delete:
Switch off the power of the controller, then switch on power,
repeat again.
Immediately press the on/off button on the Tuya Smart APP 5 times.
The light flashes 5 times means all matched remotes were deleted.

Dynamic Change Mode (Recalled by RF remote control)

Used for RGB/RGB+W:

No.	Name	No.	Name
1	RGB jump	6	RGB fade in and out
2	RGB smooth	7	Red fade in and out
3	6 color jump	8	Green fade in and out
4	6 color smooth	9	Blue fade in and out
5	Yellow cyan purple smooth	10	White fade in and out

Used for RGB+CCT:

No.	Name	No.	Name
1	RGB jump	6	RGB fade in and out
2	RGB smooth	7	Red fade in and out
3	6 color jump	8	Green fade in and out
4	6 color smooth	9	Blue fade in and out
5	Color temperature smooth	10	White fade in and out

Installation Precautions

1. The products shall not be stacked, the distance should be $\geq 20\text{cm}$, so as not to affect lifespan of the products due to poor heat dissipation.
2. The product shall not be installed close to the switching power supply with an interval of $\geq 20\text{cm}$ to avoid radiation interference of the switching power supply.
3. The installation height shall be $\geq 1\text{m}$ from the floor to avoid shortening remote control distance due to too weak reception signal.
4. The products are not allowed to be close to or covered by metal objects, with an interval of $\geq 20\text{cm}$ to avoid signal attenuation and shorten the remote distance.
5. Avoid installation at the corner of the wall or the corner of the beam, with an interval of $\geq 20\text{cm}$ to avoid signal interference.