# Triac

# AC Triac Rotary Panel Dimmer

- Rotary panel AC phase-cut dimmer, 1 channel output.
- To dim and switch single color dimmable LED lamps, traditional incandescent and halogen lights.
- Rotate knob to change brightness, support push and long push operation.
- Leading edge dimming or trailing edge dimming set by dip switch.
- Min brightness can be set by key.
- Light on/off fade time 3s selectable.
- Compatibility with RF 2.4G dimming remote control.
- Over-heat / Over-load protection, recover automatically.





# FC CE RoHS

# **Technical Parameters**

Input and Output		Environment		Safety and EMC	
Input voltage	AC100-240V	Operation temperature	Ta: -30 °C ~ +55 °C	511C : 1 1	EN IEC 55015/EN IEC 61547
Output voltage	AC100-240V	Case temperature (Max.)	Tc: +85°C	EMC standard ETSI EN 301 489-1/-3	ETSI EN 301 489-1/-3
Output current	Max. 1.5A	IP rating	IP20	Safety standard	EN 61347-1/-2
Output power	150-360W			Radio Equipment	ETSI EN 300 440
Input signal	Rotary knob + RF 2.4GHz	Package		Certification	CE RoHS FCC
RF Control distance	10m(Barrier-free space)	Size	L112 x W112 x H60mm	Warranty	
		Gross weight	0.113kg	Warranty	5 years

### Mechanical Structures and Installations

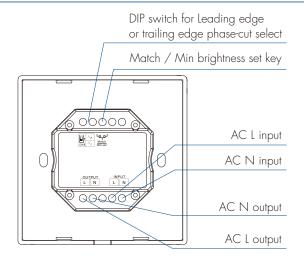

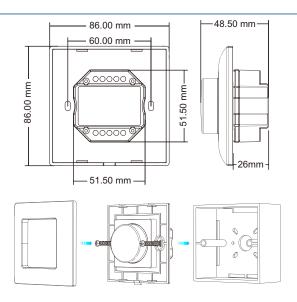

# Compatible Load Types

Load Type	Maximum Load	Remarks
D:	200W @ 220V	Due to variety of LED lamp designs, maximum number of LED lamps
Dimmable LED lamps	100W @ 110V	is further dependent on power factor result when connected to dimmer.
Triac Dimmable	200W @ 220V	Maximum permitted number of drivers is 200W divided by driver rated input
LED drivers	100W @ 110V	power, and make sure the surge current is no more than 2 times 65A.
Incandescent lighting,	400VV @ 220V	
HV Halogen lamps	200W @ 110V	

# **Knob Function**


- Push: Turn on or off light. After turn on light:
- Rotate: Rotate knob to adjust brightness, 2.5 turns, 50 levels.
- Long push(1-5s): Continuous 256 levels brightness adjustment.

## Wiring Diagram


 $\wedge$ 

🗥 Caution: Please carefully ensure all wire connections and polarities are correct and secure before applying power, otherwise this controller will be damaged.

• KS connect with dimmable LED light

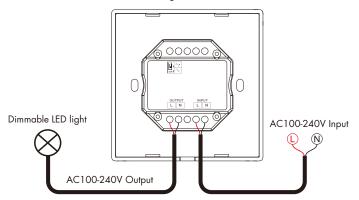

• KS connect with dimmable LED driver

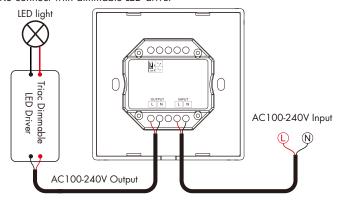


Note: When calculating the maximum number of load lamps or drivers, the input power or input current parameters of a single lamp or driver must be used, the output power parameters can not be used.

In addition, the maximum surge current of the dimmer is 65A, the sum of surge current of multiple dimmable LED drivers should not exceed 2 times. otherwise, the product will be overloaded and damaged.

## Leading Edge or Trailing Edge Dimming Setting

Select leading edge(forward-phase) dimmer or trailing edge(reverse-phase) dimmer according to dimmable LED light or driver.



Caution: before power on, you must confirm the selection of dip switch.

# Min Brightness Setting

Long press Min set key for 2s, the light blink 2 times, ready for min brightness set, then short press Min set key 1-6 times, to get 6 min brightness: 5%, 10%, 15%, 20%, 25% or 30%, the light will output the current min brightness immediately, Long press Min set key for 2s or wait 8s, quit min brightness set, the light will output 100% brightness automatically.

#### Light On/Off Fade Time

Long press match key 5s, then short press match key 3 times, the light on/off time will be set to 3s, the indicator light blink 3 times. Long press match key 10s, restore factory default parameter, the light on/off time also restore to 0.5s.

### Match Remote Control (Three Match Ways)

The AC triac rotary panel dimmer can also match with the RF dimming remote (optional). End user can choose the suitable match/delete ways. Three options are offered for selection:

#### Use Match key

Match:

Short press match key, immediately press on/off key(single zone remote) or zone key(multiple zone remote) of the remote.

Delete:

Press and hold match key for 5s to delete all match.

#### Use Knob

Match:

Turn on light, turn off, immediately push the knob for 5s, immediately press on/off key(single zone remote) or zone key(multiple zone remote) of the remote.

Delete

Turn on light, turn off, immediately push the knob for 10s, delete all matched remotes.

#### Use Power Restart

Match:

Switch off the power, then switch on power, repeat again, immediately short press on/off key (single zone remote) or zone key (multiple zone remote) 3 times on the remote. The light blinks 3 times means match is successful.

Doloto:

Switch off the power, then switch on power, repeat again, immediately short press on/off key (single zone remote) or zone key (multiple zone remote) 5 times on the remote. The light blinks 5 times means all matched remotes were deleted.

#### Statement

#### FCC Statement:

This device complies with Part 15 of the FCC Rules. operation is subject to the following two conditions:

(1)this device may not cause harmful interference, and

(2)this device must accept any interference received, including interference that may cause undesired operation.

IC Statement: This Class B digital apparatus complies with Canadian ICES-003.

(Cet appareil numérique de la Classe B conforme à la norme NMB-003 du Canada).